

Mounting Instructions

The Icon 2 is intended for wall mounted operation. It is provided with a 'H Shaped' wall mounting bracket. Upon unpacking the H bracket will be secured on the rear of the jukebox. It will be secured by a fixing bolt. This can be removed from the exterior of the unit and must be retained. Once the bracket is removed ensure that the keys are also removed from their shipping position on the H bracket.

Please Note: This is a heavy and awkward item to lift and it is recommended that at least 2 people are used to lift the jukebox.

Step 1 - Mount Your Bracket.

Before you begin.


Ensure the wall you are securing the jukebox to is adequate to support the weight of the unit

Ensure the screws and plugs are both suited for the wall and the weight of the unit.

Ensure the location has enough space around the unit and allow for ventilation and the door opening arc.

Do not mount near sources of heat or electrical interference.

- Hold the bracket against the wall, with a spirit level approximately 70" from the ground to top of bracket.
- Mark the fixing holes (a minimum of 8)
- Drill the holes, and insert rawl plugs
- Hold the bracket to the wall and screw through until all are tightened.
- Test the bracket for movement by applying force to its supporting mounts.

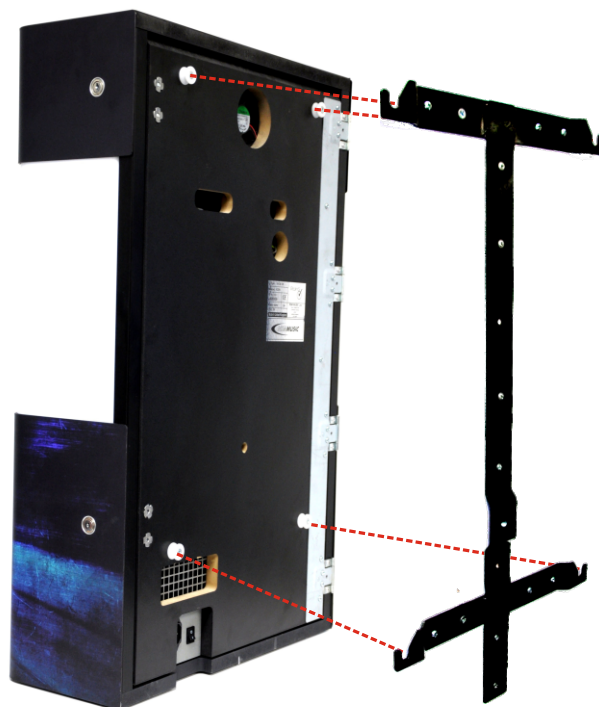

Step 2 - Hang Your Jukebox

Before you begin.

Ensure the power lead is inserted into the power socket on the rear of the jukebox

Ensure the speaker & IR remote cables are fed into the slot provided on the rear of the unit.

- Position the jukebox against the mounting H Bracket, so that the jukebox pegs align just above the peg support hooks.
- Lower the jukebox slowly down so the pegs are supported by the hooks. Ensure all 4 pegs are in their respective hooks.
- Open the jukebox and bolt in the securing bolt and washer that were shipped with the unit. Tighten and check jukebox stability.